


Installation Steps

- The Showermi\$er can be connected anywhere on the non-pressurised side of the freshwater system, ie the freshwater tank or the input (suction) side of the water pump
- Simply remove the showerhead and attach the Showermi\$er unit
- Line up and mark where the return line will be
- Drill a single hole (using a hole saw) in the shower wall through to the inside wall where the other plumbing is located
- Using the provided lock nut and washer, tighten the Showermi\$er snugly against the wall
- Using a return line with a 1/2" female pipe thread fitting, attach the return line to the Showermi\$er unit
- Lastly, connect the other side of the return line to anywhere it is convenient on the non-pressurised side of the freshwater system.

CAUTION when switching lever back to shower, the water will be HOT

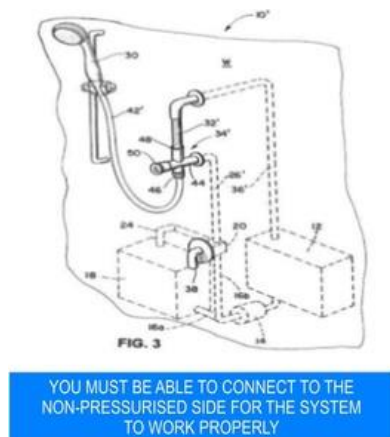

Our Showermi\$er range are not Watermarked / Do not have a WELS Rating

Please Note: Due to continuous product improvement, specifications are subject to change without notice.

Contact Us: sales@topargee.com.au / 0418 767 967