

# In-Wall Mixer Installation Instructions

The faucet unit (on the back) has two sets of ports.

The one set (two ports) is for the hot and cold water inlets, and is positioned so it is on the bottom.

The other set (three ports) is your outlets, and is positioned so it is on the Top

The three outlets are as follows (order can be changed).


- 1) The center port goes straight up to the shower head.
- 2) The right port goes to the input to either of the 1/2" sides of the provided clear plastic tee.



- a) The other side of the tee goes to your return line or out to your storage tank..
- b) The 3/4" side goes through the wall to the front of the shower where the blue mushroom cap (Provided in the kit) is installed per the enclosed instructions.
- 3) The Left port can be capped off or attached to a hand wand, body spray unit, tub spout or other shower attachment.

## Magic Mushroom installation onto Aqua View Tee:

- 1) Screw 3/4" Lock Nut onto 3/4" male thread of the Tee. Make sure the flat side is facing out toward end of the threads. Screw it all the way down until it stops.
- 2) Slide Rubber washer over 3/4" threads and press against lock nut.
- 3) Then wrap 2 to 3 turns of Teflon tape on the 3/4" end of the Tee.
- 3) Insert Tee into predrilled 1 3/8" hole in shower wall.
- 4) Screw Magic Mushroom onto the 3/4" Thread. Turn Magic Mushroom until snug then turn slightly more until Aqua View logo is horizontal to the shower floor. **HAND TIGHTEN ONLY!**
- 5) Screw 3/4" Lock nut toward shower wall until snug against the back side of the wall. **HAND TIGHTEN ONLY!**

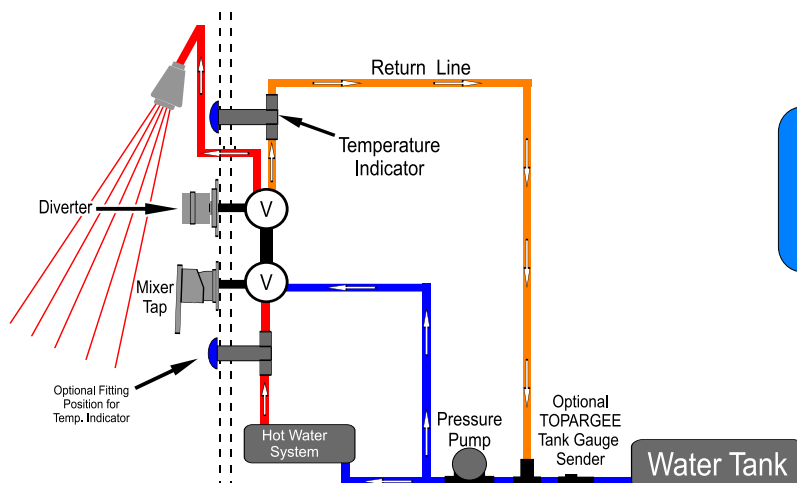

NO WASTED WATER DOWN THE DRAIN,  
FRESH AND GREY TANK CAPACITIES  
ARE INCREASED!